 


Why Skin Pass Mill is necessary for Hot Strip Mill ?

Lots of necessary functions

1. To get good shape (flatness)
2. To prevent coil break
3. To get smooth surface
4. To adjust coil tonnage to customer's demand
5. To discard the scrap and secondary portion
6. To inspect coil surface



Generally there is not a hot strip mill without a skin pass mill.

Photo. of coil break



Example of skin pass mill

